



WACOM GESTURE GUIDE: USING TOUCH WITH WACOM PRODUCTS



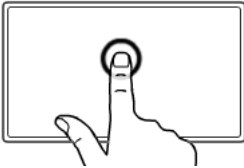
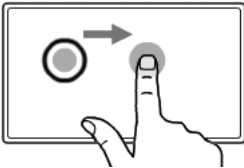
Wacom products that support touch are designed to enhance the way you work. Touch enables you to interact with a computer using only your fingertips on Wacom products, including tablets (Bamboo, Intuos) and pen displays (Cintiq or similar products).

In the illustrations below:

- A filled gray circle indicates a tap and hold.
- An unfilled circle indicates a tap to click.
- A filled circle with a black outline indicates a tap, then a tap and hold.

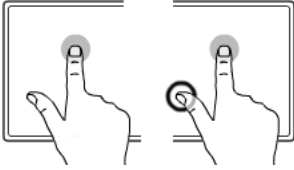
Please note: Not all gestures are supported on all operating systems or all drivers. Refer to your Wacom Tablet Properties or Wacom User's Manual for information about the gestures available on your tablet or operating system.

BASIC FUNCTIONS

MOVE SCREEN CURSOR	Touch and slide a single finger across the tablet surface.
TAP TO CLICK 	Tap with one finger to click. Tap twice to double-click.
DRAG (Intuos and Bamboo only) 	Tap with one finger to select. Tap again quickly, leaving your finger on the tablet, and slide to drag.



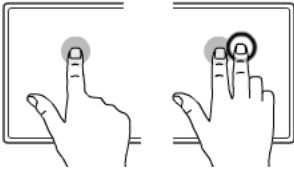
ADD TAP TO CLICK



Move your cursor to an item. Tap with your thumb or a second finger to the left.

Note: If the tablet orientation is set for left-handed use, touch to the right of the primary finger.

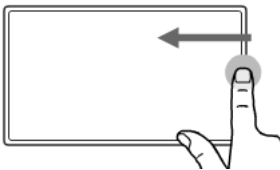
ADD TAP TO RIGHT CLICK (Intuos and Bamboo only)



Move your cursor to an item. Tap with a second finger to the right.

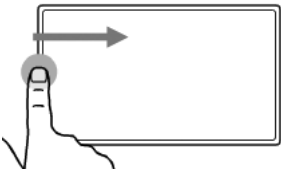
Note: If the tablet orientation is set for left-handed use, touch to the left of the primary finger.

SWIPE FROM RIGHT EDGE TO OPEN CHARMS (Windows 8 only)



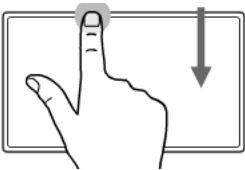
Swipe with one finger from the right edge of the tablet toward the center to open Charms.

SWIPE FROM LEFT EDGE TO SWITCH APPS (Windows 8 only)



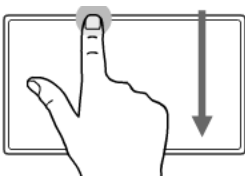
Swipe with one finger from the left edge of the tablet toward the center to switch between open applications

SWIPE FROM TOP OR BOTTOM EDGE TO OPEN APP BAR (Windows 8 only)

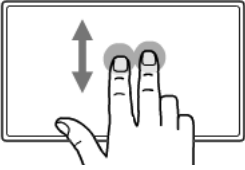
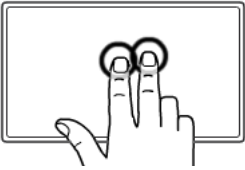
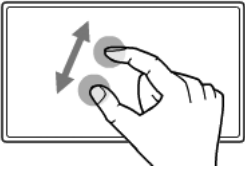
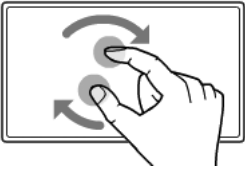
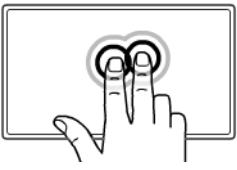
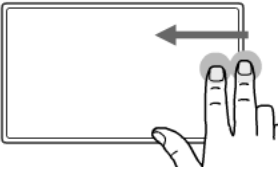


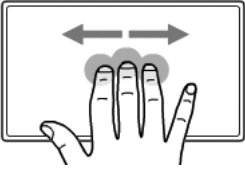
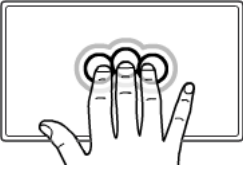
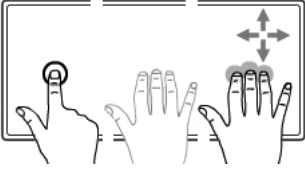
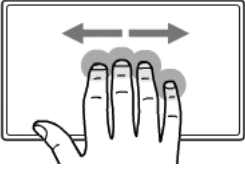
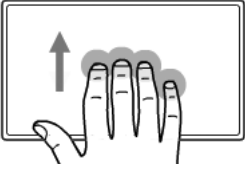
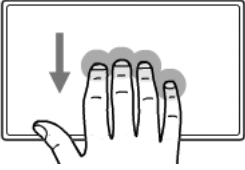
Swipe with one finger from the top or bottom edge of the tablet toward the center to open the application bar.

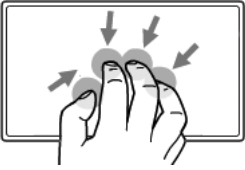
SWIPE FROM TOP EDGE OVER BOTTOM EDGE TO CLOSE APP (Windows 8 only)



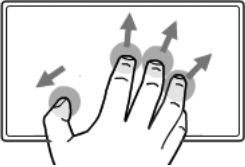
Swipe with one finger from above the top edge of the tablet over the bottom edge to close an application.

<p>SCROLL</p> 	<p>Move two fingers smoothly together in parallel.</p> <ul style="list-style-type: none"> • Move up to scroll up. • Move down to scroll down. • Move left to scroll left. • Move right to scroll right. <p><u>Natural Scrolling in Mac OS 10.7 and 10.8:</u> For Natural Scrolling, refer to your Mac usage or support documentation.</p>
<p>TAP TO RIGHT CLICK</p> 	<p>Tap with two fingers spaced slightly apart.</p>
<p>ZOOM</p> 	<p>Expand two fingers away from each other to zoom in. Pinch two fingers together to zoom out.</p>
<p>ROTATE</p> 	<p>Move two fingers clockwise or counter-clockwise to rotate an image.</p>
<p>SMART ZOOM</p> 	<p>Double-tap with two fingers to zoom in. Double-tap a second time to zoom out.</p>
<p>SWIPE FROM RIGHT EDGE TO OPEN NOTIFICATION CENTER (Mac OS 10.8 only)</p> 	<p>Swipe with two fingers from the right edge of the tablet toward the center to open the Notification Center.</p>

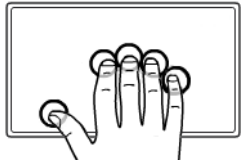
<p>SWIPE LEFT/RIGHT TO NAVIGATE</p> 	<p>Swipe with two or three fingers spaced slightly apart.</p> <ul style="list-style-type: none"> • Swipe right to send a 'Forward' command in most browsers and picture viewers. • Swipe left to send a 'Back' command.
<p>DOUBLE TAP FOR LOOK UP (Mac OS 10.8 only)</p> 	<p>Tap twice with three fingers spaced slightly apart for look up.</p>
<p>DRAG (Intuos only)</p> 	<p><u>Mac OS 10.7 only:</u> Tap to select. Lift your finger from the tablet surface.</p> <p>Use three fingers spaced slightly apart to drag.</p>
<p>SWIPE LEFT/RIGHT TO SWITCH APPLICATIONS</p> 	<p>Swipe left or right using four fingers spaced slightly apart to open the application switcher.</p> <p><u>Mac OS 10.7:</u> Swipe left or right to switch between full-screen apps.</p>
<p>SWIPE UP TO SHOW DESKTOP</p> 	<p>Swipe up using four fingers to show the desktop. Swipe up again to move your open windows back to the desktop.</p> <ul style="list-style-type: none"> • <u>Mac OS 10.7:</u> Swipe up for Mission Control. Swipe up again to exit Mission Control. • For Bamboo: Use three fingers to swipe.
<p>SWIPE DOWN FOR FLIP 3D/EXPOSÉ/ APP EXPOSÉ/</p> 	<p>Swipe down using four fingers.</p> <ul style="list-style-type: none"> • <u>Flip 3D (Windows):</u> Swipe once to open Flip 3D. Swipe down again to close Flip 3D. • <u>Exposé (Mac):</u> Swipe once to open Exposé. Swipe down again to close Exposé. • <u>App Exposé, Mac 10.7 and 10.8:</u> Swipe down to preview the open windows of the app you are working with. Swipe down again to exit App Exposé. • For Bamboo: Use three fingers to swipe.

PINCH FOR LAUNCHPAD


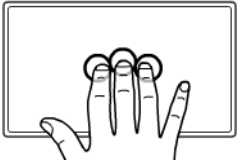
Mac OS 10.7 and 10.8: Pinch your thumb and three fingers together to fade your open windows and display all of your apps.

EXPAND TO SHOW DESKTOP


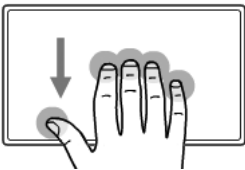
Mac OS 10.7 and 10.8: Expand your thumb and three fingers apart to show the desktop view.

TAP TO SAVE (Intuos) OR DISPLAY KEYBOARD (pen displays only)


- Intuos: Tap your fingers on the tablet surface to save your work in the open application window.
- Pen display: Tap your fingers on the tablet surface to display the keyboard.

WACOM-SPECIFIC FUNCTIONS
TAP TO DISPLAY RADIAL MENU (Intuos and pen displays only)


Tap three fingers on the tablet surface to open the Radial Menu on your display screen.

SWIPE DOWN TO DISPLAY SETTINGS (Intuos and pen displays only)


Swipe down to activate an interactive diagram of the current ExpressKey, Touch Ring, and pen settings.
Swipe down again to dismiss the diagram.

Wacom Gesture Guide: Using touch with Wacom products

Version 3.0, Rev I1212

Copyright © Wacom Co., Ltd., 2012

All rights reserved. No part of this document may be reproduced except for your express personal use. Wacom reserves the right to revise this publication without obligation to provide notification of such changes. Wacom does its best to provide current and accurate information in this document. However, Wacom reserves the right to change any specifications and product configurations at its discretion, without prior notice and without obligation to include such changes in this document.

Bamboo, Intuos, Cintiq, and Wacom are registered trademarks of Wacom Co., Ltd.

Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. Apple and Mac are trademarks of Apple, Inc., registered in the U.S. and other countries.

Any additional company and product names mentioned in this documentation may be trademarked and/or registered as trademarks. Mention of third-party products is for informational purposes only and constitutes neither an endorsement nor a recommendation. Wacom assumes no responsibility with regard to the performance or use of these products.

ExpressKey is a registered trademark of Ginsan Industries, Inc., and is used with permission.